


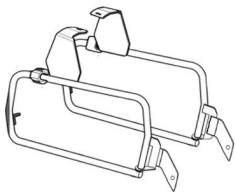









<b>1</b> K0VR68I4P-IM x1 	<b>2</b> EOD017 x2 BOLT M8X40 DIN912 	<b>3</b> EOD028 x4 WASHER M8 	<b>4</b> EOD064 x2 WASHER M8X24 	<b>5</b> EOD035 x2 NYLON NUT M8 	<b>6</b> EOD005 x2 BOLT M6X15 DIN912 
	<b>7</b> EOD027 x4 WASHER M6 	<b>8</b> AS JOINT 4P VERSYS 650 x1 	<b>9</b> EOD034 x2 NYLON NUT M6 	<b>10</b> EOD053 x2 SPLIT LOCK WASHER M8 	<b>11</b> EOD014 x2 BOLT M8X25 DIN912 

## WARNING!

**(GB)** Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned. Check tightness every 4 months.

**(E)** No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado. Repasar apriete cada 4 meses.

**(D)** Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist. Alle 4 Monate Drehmoment überprüfen.

**(I)** Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato. Controllare il serraggio delle viti ogni 4 mesi.

**(F)** Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté. Vérifier le serrage des vis tous les 4 mois.

