


SHAD

VOGE 300 RALLY '23 TOP MASTER V0RL33ST

BCN

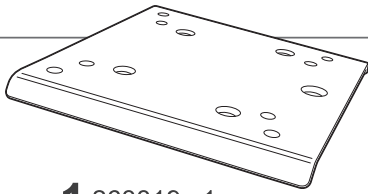


1 263319 x1



2 260983 x1
Ø14 Ø9 x 29




3 303025 x1
Ø10



4 304266 x1
M8x80 DIN 7991



5 260213 x4
Ø16 Ø9 x 12



6 304029 x4
M6x35 DIN 7991

WARNING!

GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned. Check tightness every 4 months.

E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado. Repasar apriete cada 4 meses.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist. Alle 4 Monate Drehmoment überprüfen.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato. Controllare il serraggio delle viti ogni 4 mesi.

F Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté. Vérifier le serrage des vis tous les 4 mois.

