

ANBAUANLEITUNG

mounting instructions • instructions de montage • instrucciones de montaje • istruzioni di montaggio

HPR.00.666.42500/WH

beinhaltet • contains • contient • contiene • contiene

BHG-062-05-NP




FITTING INSTRUCTIONS for...

HONDA CRF 1000L AFRICA TWIN - DCT/non DCT ('16 on)
HONDA CRF 1000L AFRICA TWIN - ADVENTURE SPORT DCT/non DCT ('18 on)
HONDA X-ADV 750 ('17-'19)


Riding Direction

Left Side

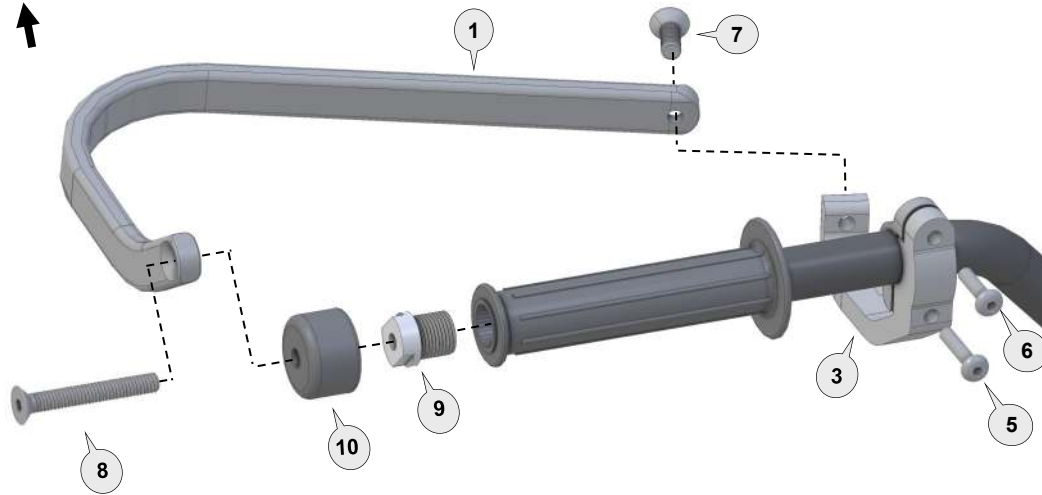


Right Side

Riding Direction

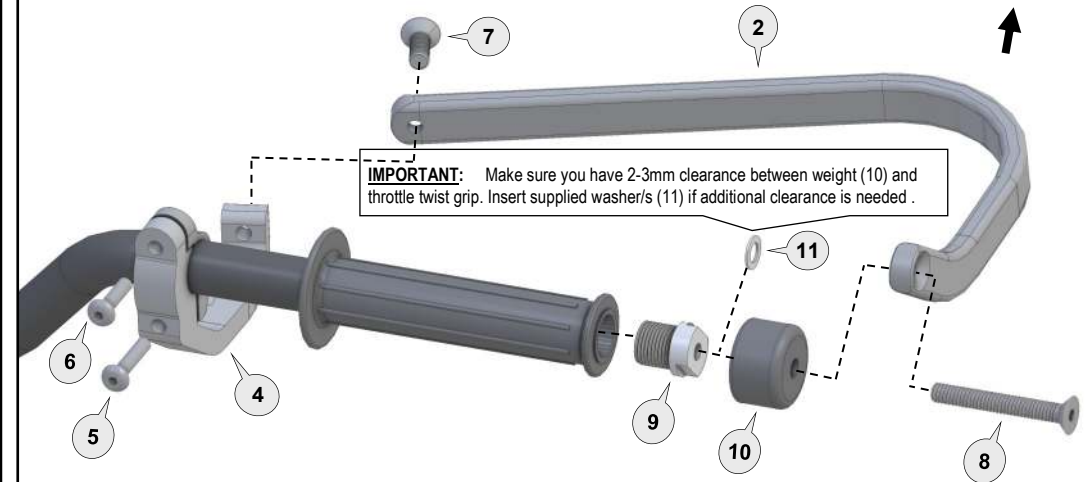


Preparation

- Remove original factory handguard components if installed. Reattach the original screws with the flanged spacers and nuts. Tighten the original screws to the manufacturer's specified torque.
- Remove original external handlebar end weights and metal clips. **NOTE:** Retain internal handlebar weights.

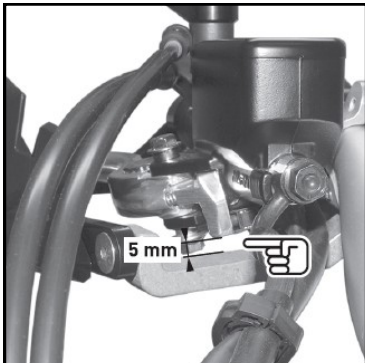

IMPORTANT: Right Side clearance of 5mm required.

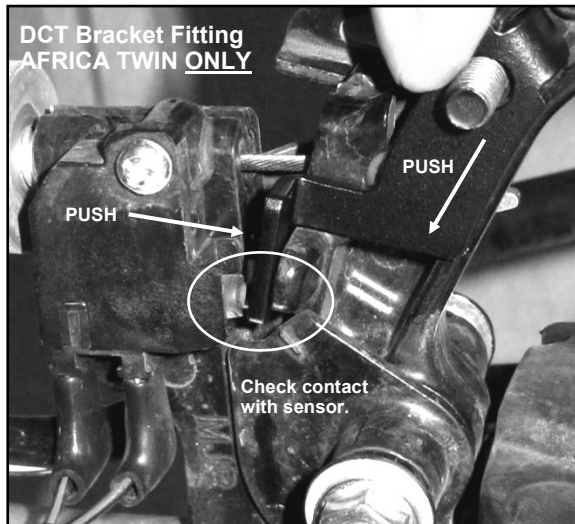

Fitting Procedure

- Fit Threaded Insert (9) and tighten to specified torque setting.
 - Loosely assemble clamp (3/4) to handlebar and attach backbone with applicable parts as per diagram.
- Note:** The preferred backbone position is horizontal when viewed from side.
- Tighten all bolts in the following order (8), (7), (5) then (6).
- Use recommended torque specifications over page.

DCT model AFRICA TWIN ONLY:

- Loosen park brake cable adjuster a few turns.
- Remove original screw from the park brake lock and replace with screw (12) then tighten as specified.
- Mount Pressed Metal Bracket (13) between the brake lever and parking brake sensor and secure with Nut (14) as shown, then tighten as specified.
- Set brake cable adjuster to desired position and secure.


IMPORTANT:

Position bracket (13) as shown in picture before tightening.

← see image

Check the bracket makes contact with the sensor. Slight repositioning of the sensor may also be necessary.

AFRICA TWIN ONLY

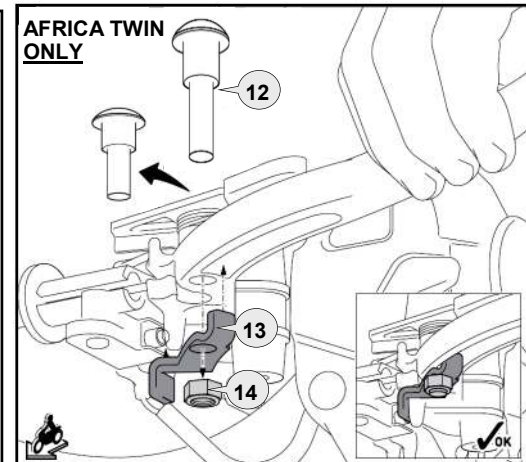

1 Aluminium Bar  PN: BAR-V-036 Pcs. 1 Left	2 Aluminium Bar  PN: BAR-V-036 Pcs. 1 Right	3 Clamp Frame & Saddle LEFT  PN: CFS-ADV-L Pcs. 1	4 Clamp Frame & Saddle RIGHT  PN: CFS-ADV-R Pcs. 1	5 Button Head Bolt 30mm  PN: M6X30BHCSZP Pcs. 2	6 Button Head Bolt 20mm  PN: M6X20BHCSZP Pcs. 2	7 Flat Head Bolt 20mm  PN: M8X20FHCSZP Pcs. 2	8 Flat Head Bolt 45mm  PN: M8X45FHCSZP Pcs. 2
------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------

9 Threaded Insert  PN: BESF4 Pcs. 2	10 Bar End Weight  PN: BEW35 Pcs. 2	11 M8 Flat Washer  PN: M8FW-SS Pcs. 2	12 Shoulder Bolt 30mm  PN: M6X30SB Pcs. 1	13 Pressed Metal Bracket  PN: BPM1 Pcs. 1	14 Nylock Nut 6mm  PN: M6LN Pcs. 1
-----------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------

NOTE:

Part Numbers 12, 13 & 14 ONLY required for AFRICA TWIN DCT models.

Bar Side View



CAUTION:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician. Rideworx accepts no liability for damages caused by improper mounting. All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specified in the table. After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

WARNING:

Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly or if rear view mirror vision is obscured. Check periodically that all bolts are tight.

Disclaimer:

A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.

INS-BHG-062-05-NP

Personalise Your Protection
Guard options sold separately

 JET-003
 VPS-003
 STM-003
 BCF-003

Recommended Torque Settings

M6	10 Nm (7.4 lbf ft)
M8	20 Nm (14.8 lbf ft)
M18 (item 9)	21Nm (15.5 lbf ft)



Email: info@barkbusters.net
Web: www.barkbusters.net

